

MASTERPRO

PREMIUM QUALITY

DELUXE COOKS BLOWTORCH

(THIS BLOWTORCH IS SUPPLIED EMPTY AND WILL NEED FILLING BEFORE USE)

Instructions for use

It is important to read these instructions carefully and familiarise yourself with the product before lighting or using. Reread the instructions periodically to refresh your memory. Retain these instructions for future use.

Turning Off/Safety Lock

Turn the gas flow control knob completely clockwise to shut off the flame.

Always slide the locking lever to 'lock' when not in use. When in storage, the blowtorch SHOULD always be in the 'lock' position.

WARNING

KEEP AWAY FROM CHILDREN

1. IMPORTANT AFTER EACH FILLING, WAIT FOR TWO MINUTES BEFORE USE TO ALLOW GAS TO STABILISE AND FOR VAPOUR TO DISSIPATE.
2. Read directions before use.
3. Only use primary branded aerosol butane gas.
4. Keep the nozzle clean from dust and do not drop the torch as these are normal causes for malfunction.
5. Do not store under direct sunlight or any place where temperatures will exceed 40°C.
6. Do not touch flame guard when hot.
7. Butane gas is extremely flammable. Please handle with care.
8. Always point away from face and clothing when igniting and operating.
9. Make sure the flame adjuster is firmly closed and flame is completely extinguished after each use.
10. After use allow torch to cool down before storing.
11. Do not continually use this tool for over 1 hour.
12. Never puncture or dispose of in a fire.
13. Read and follow all instructions and cautions on the fuel canister
14. Do not use to light cigarettes, cigars or pipes.
15. Never loosen or tamper with the filling valve on the base of the torch.
16. If stored for long periods of time without use, please safely vent all gas from the blowtorch prior to storage. This should be done outside away from any source of ignition.
17. When filled, contains flammable gas under pressure.
18. Never carry a blowtorch in hand luggage or hold luggage on to a plane.

19. Whilst the adjustable anti-flare flame works at any angle, please refrain from pointing flame directly downward, as built up heat may cause damage to the unit. We advise an operation angle of 45° down.

TEMPERATURE CONTROL

The blue part of the flame is the hottest. A simple way of controlling temperature is the distance of the blue flame to the object you are heating. If you need gentle heat this can be obtained by distance.

OPERATING INSTRUCTIONS

NOTE: Primary branded aerosol butane gas can be bought from most newsagents and tobacconists, also from tobacconist's counters in leading supermarkets.

GAS FILLING

Always fill outdoors in a well ventilated area.

Only use primary branded aerosol butane gas.

Make sure the on/off gas flow control knob is in the 'off' position. To do this, turn clockwise fully to the '-' sign on the blowtorch.

Turn the unit upside down and insert fill stem into fill valve and press down for 3-4 seconds, repeat three times. Back spray from fill valve indicates that appliance is full.

After filling, allow two minutes for the gas to stabilise.

Always read and follow all instructions and cautions on the fuel canister.

IGNITING

Slide the safety lock to the 'off' position.

Turn gas flow control knob anti-clock wise in a 2/3 circle.

Gas will flow with a hissing sound from flame guard.

Press ignition button to ignite flame. Slide the safety lock to the lock on position.

Do not add attachments to the end of the gas refill canister as the valve is designed to accept the gas direct from the gas can without adaptors added. (These adaptors usually provided for cigarette lighters.)

FLAME ADJUSTMENT

Adjust the flame length during use by turning the gas flow control knob.

Adjust the flame intensity/width during use by sliding the flame adjuster as far left as possible.

FLAME GUARD

FLAME ADJUSTER

AIR VENT

IGNITION
BUTTON

GAS FLOW
CONTROL KNOB

SAFETY LOCK

SAFETY
STAND



MASTERPRO

PREMIUM QUALITY

www.master-pro.com.au