

# MASTERPRO

PREMIUM QUALITY

## CHEF BLOWTORCH

**(BLOWTORCH IS SUPPLIED EMPTY AND MUST BE FILLED BEFORE USE)**

### INSTRUCTIONS FOR USE

It is important to read these instructions carefully and familiarise yourself with product before lighting or operating. Re-read instructions periodically to refresh your memory. Retain instructions for future reference.

Turning Off/Safety Lock

Safety Lock is always engaged when not in use.

To turn blowtorch off, simply release Ignitor Button (5).

### WARNING

KEEP AWAY FROM CHILDREN

1. **IMPORTANT: AFTER EACH FILLING, WAIT FOR 2 MINUTES BEFORE USE TO ALLOW GAS TO STABILISE AND FOR VAPOUR TO DISSIPATE.**
2. Read instructions before use.
3. Only use primary branded aerosol butane gas.
4. Refill in a well-ventilated area.
5. Keep nozzle clean from dust and do not drop blowtorch as these are causes for malfunction.
6. Do not store under direct sunlight or in any place where temperature will exceed 40°C.
7. Do not touch Flame Guard (1) during and after operation as it becomes extremely hot. Care must be taken to avoid accidental burns.
8. Butane gas is extremely flammable. Handle with care.
9. Always point blowtorch away from face and clothing when igniting and operating.
10. Make sure Safety Lock (3) has engaged when not in use, and that flame has completely extinguished after each use.
11. After use, allow blowtorch to cool down before storing.
12. Do not continually use blowtorch for over 1 hour.
13. Never puncture or dispose of in fire. Discard empty gas cartridges responsibly.
14. Read and follow all instructions and warnings on butane gas packaging.
15. Do not use blowtorch to light cigarettes, cigars or pipes.
16. Never loosen or tamper with Filler Valve (7) on base of blowtorch.
17. If stored for long periods of time without use, safely vent all gas from blowtorch prior to storing. This should be done outside, away from any source of ignition. Always store vertically.
18. If blowtorch looks damaged in any way – do not use. Discard in bin.
19. Never carry a blowtorch in hand luggage or hold luggage on an aircraft.
20. Refrain from pointing flame directly downward, as built up heat may damage blowtorch. Operation angle of 45° down is advised.

### TEMPERATURE CONTROL

Blue part of flame is hottest. A simple way to control temperature is by controlling distance between blue flame and object being heated. Gentle heat can be obtained by increasing distance.

### OPERATING INSTRUCTIONS

NOTE: Primary branded aerosol butane gas can be purchased from barbecue, kitchen and hardware stores and many supermarket service desks.

### GAS FILLING

Always fill outdoors in a well-ventilated area.

Only use primary branded aerosol butane gas.

Ensure Filler Valve (7) is tight.

Turn unit upside down and insert fill stem from gas can/cylinder into Filler Valve (7) and press down for 3-4 seconds. Repeat 3 times. Back spray from Filler Valve (7) indicates that blowtorch is full (Figure A).

After filling allow 2 minutes for gas to stabilise.

Always read and follow all instructions on butane gas packaging.

### IGNITING

Push Flame Adjustment Slide (2) to the '+' position.

Push down Safety Lock (3) button until it clicks into place (Figure B).

Press down Ignitor Button (5) and flame will ignite instantly (Figure C).

For safety reasons, Ignitor Button (5) will not depress unless Safety Lock (3) is locked in place.

Do not add attachments to the end of gas refill canister as valve is designed to accept gas direct from can without any adaptors added (these adaptors are usually provided for cigarette lighters).

### FLAME ADJUSTMENT & CONTINUOUS FLAME

Flame length can be adjusted during use by moving the Flame Adjustment Slide (2) to the '-' position for approximately 1cm flame length and '+' position for approximately 2.5cm flame length. Ignitor Button (5) must remain depressed when adjusting flame length unless Continuous Flame Lock Lever (4) is activated. Be aware of flame direction when adjusting flame length.

To engage Continuous Flame feature, hold down Ignitor Button (5) and slide Continuous Flame Lock Lever (4) towards back of blowtorch (Figure D). Release Ignitor Button (5) and flame will remain on. To turn Continuous Flame feature off, slide Continuous Flame Lock Lever (4) towards front of blowtorch (Figure F). If Ignitor Button isn't being held down at this time, flame will extinguish.

CAUTION: Use extreme caution when Continuous Flame feature is activated and be aware of flame direction. Flame will be continuous and not turn off until the Continuous Flame Lock Lever (4) is manually disengaged, or gas runs out.

MASTERPRO

PREMIUM QUALITY

CHEF  
BLOWTORCH



**CAUTION:** Do not try and repair or disassemble any parts of the blowtorch.